

Audio:

The Tera 2321 Zero Clients support the Realtek High-Definition Audio Codec. Windows® 7 / Vista natively contains an HD Audio driver for this Codec. For other operating systems, including Windows® XP, please install the High-Definition Audio Codec driver from www.evga.com/support/download to use the PCoIP® System's full audio capabilities.

IP Address:

The Zero Client is set to DHCP client mode by default. Normally, the IP address of the Zero Client is assigned by the DHCP server on your IP network. If your IP network does not have a DHCP server, the Zero Client will fall back to a static (Default) IP address mode after a timeout period of approximately 2 minutes. In the fall back static IP address mode you can access the Zero Client web interface to configure the Zero Client or Host card and assign a static IP address:

- Zero Client Default IP address: 192.168.1.50
- Host card Default IP address: 192.168.50.100

Zero Client Power Button functions:

The Zero Client's Power Button (a) is a multi-function button.

- A short push (< 4 seconds) disconnects the Zero Client from the VM. (When connected to a session)
- A long push (> 4 seconds) powers off the Zero Client.

Need More Help?

Please refer to the digital manual online at www.evga.com/manuals.

This Product Covered By:

This product is covered under EVGA's 3yr warranty which covers parts and labor. For more details on the warranty length and terms of this specific product, please visit www.evga.com/warranty.

EVGA Support:

North America (US and Canada only)

- +1-888-881-EVGA (3842)
- support@evga.com
- www.evga.com/support

Latin America

- +1-714-528-4500
- latam.evga.com/support (All Latin American Countries)
- br.evga.com/support (Brazil)

Europe

- +49-89-189-049-11
- supporteu@evga.com
- eu.evga.com/support

Asia Pacific / Australia

- +886-2-82262868, 0800-28-2868 (Taiwan)
- supporttw@evga.com
- tw.evga.com/support

www.evga.com/pcoip


E009-00-000044

EVGA

PD06/PD07 PCoIP® Visual Guide


PD06/PD07 PCoIP® Zero Client

Top

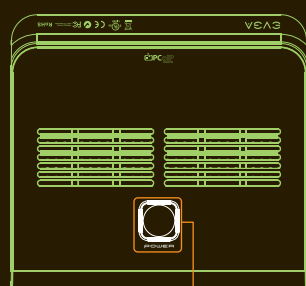

(Standby \cup) Power Button (a)

Front

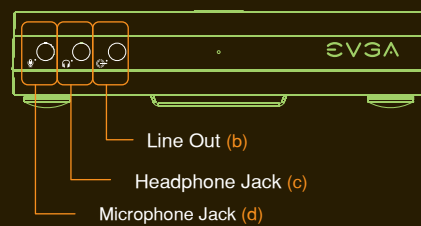


Line Out (b)

Headphone Jack (c)

Microphone Jack (d)

 
Right Side



Right USB Ports (e)

Kensington Security Slot (f)

Back

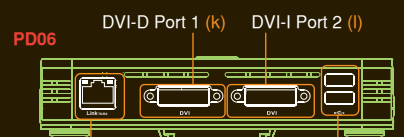

PD06

DVI-D Port 1 (k)

DVI-I Port 2 (l)

Ethernet Port (i)


Rear USB Ports (m)

Left Side



12VDC Power Jack (g)

Left USB Ports (h)

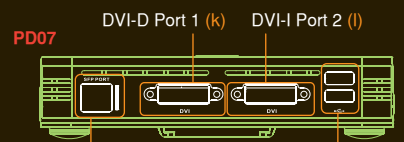

PD07

DVI-D Port 1 (k)

DVI-I Port 2 (l)

SFP Port (Small Form-factor Pluggable) (j)

Rear USB Ports (m)

Package Contents

- Zero Client
- Power adapter and cord
- Visual Guide
- Ethernet Cable (PD06 only)



WARNING

1. Always power down and disconnect devices from AC power before handling them. Failure to do this can result in personal injury or equipment damage.
2. For Security reasons prior to shipment to another location or for warranty service, please make sure to reset all parameters under Options > Configuration > Reset to remove all IP configurations and settings.

PCoIP® Zero Client Installation

1. Be sure the monitor and the Zero Client are turned off and disconnected from AC power.
2. Use a DVI cable to connect the monitor to the Zero Client's DVI Port 1 (k).
3. Plug the monitor's power cable into an AC outlet and power it on.
4. If you are using dual monitors, repeat Steps 1 through 3 but connect the second monitor to the Zero Client's DVI Port 2 (l).
5. Connect a USB keyboard and mouse to the Zero Client's USB ports (m).
6. (PD06) - Use an Ethernet cable to connect the Ethernet switch or router to the Zero Client's Ethernet jack (i). (PD07) - Use a Fiber cable to connect the Fiber switch or router to the Zero Client's Fiber SFP port (j).
7. Connect the Zero Client power supply to the Zero Client's power jack (g), then plug the Zero Client power supply into a surge-protected AC outlet. [Ambient 35°C and Input rating (12V, 3A)]
8. Optionally connect the following devices to the Zero Client:
 - PC speaker to line out (b)
 - Headphones to headphone jack (c)
 - MIC to microphone jack (d)
 - Auxiliary USB ports (e, h)
 - Kensington security lock (cable not included) (f)
9. Power on the Zero Client by pushing the power button (a).

Remote Power Management

During PCoIP® sessions you can use the Zero Client Power Button (a) to change the power state of the workstation equipped with a Teradici enabled host card. This allows the user to power off remotely from the Zero Client. Visit www.evga.com/support/manuals for a digital version of all EVGA PCoIP® product manuals, management console manual and setup instructions.

Additional Notes

Monitor types:

The EVGA Zero Client's DVI-I connection is compatible with VGA and HDMI monitors. Simply attach a DVI-to-VGA or DVI-to-HDMI adapter to the Zero Client's DVI-I connector¹. For resolutions above 1920x1200, an optional cable is required to combine both DVI ports to allow a single display supporting up to 2560x1600. ¹ Adapters not included